

PARTS LIST

BC4320i

CONTENTS


1. MAIN BODY	1 ~ 2
2. GEARCASE	3 ~ 4
3. ENGINE	5 ~ 8
4. CARBURETOR, FUEL TANK	9 ~ 12
5. ACCESSORIES	13 ~ 14

FUREKY

2012. 05.


P/N 523399

1. BC4320i
MAIN BODY

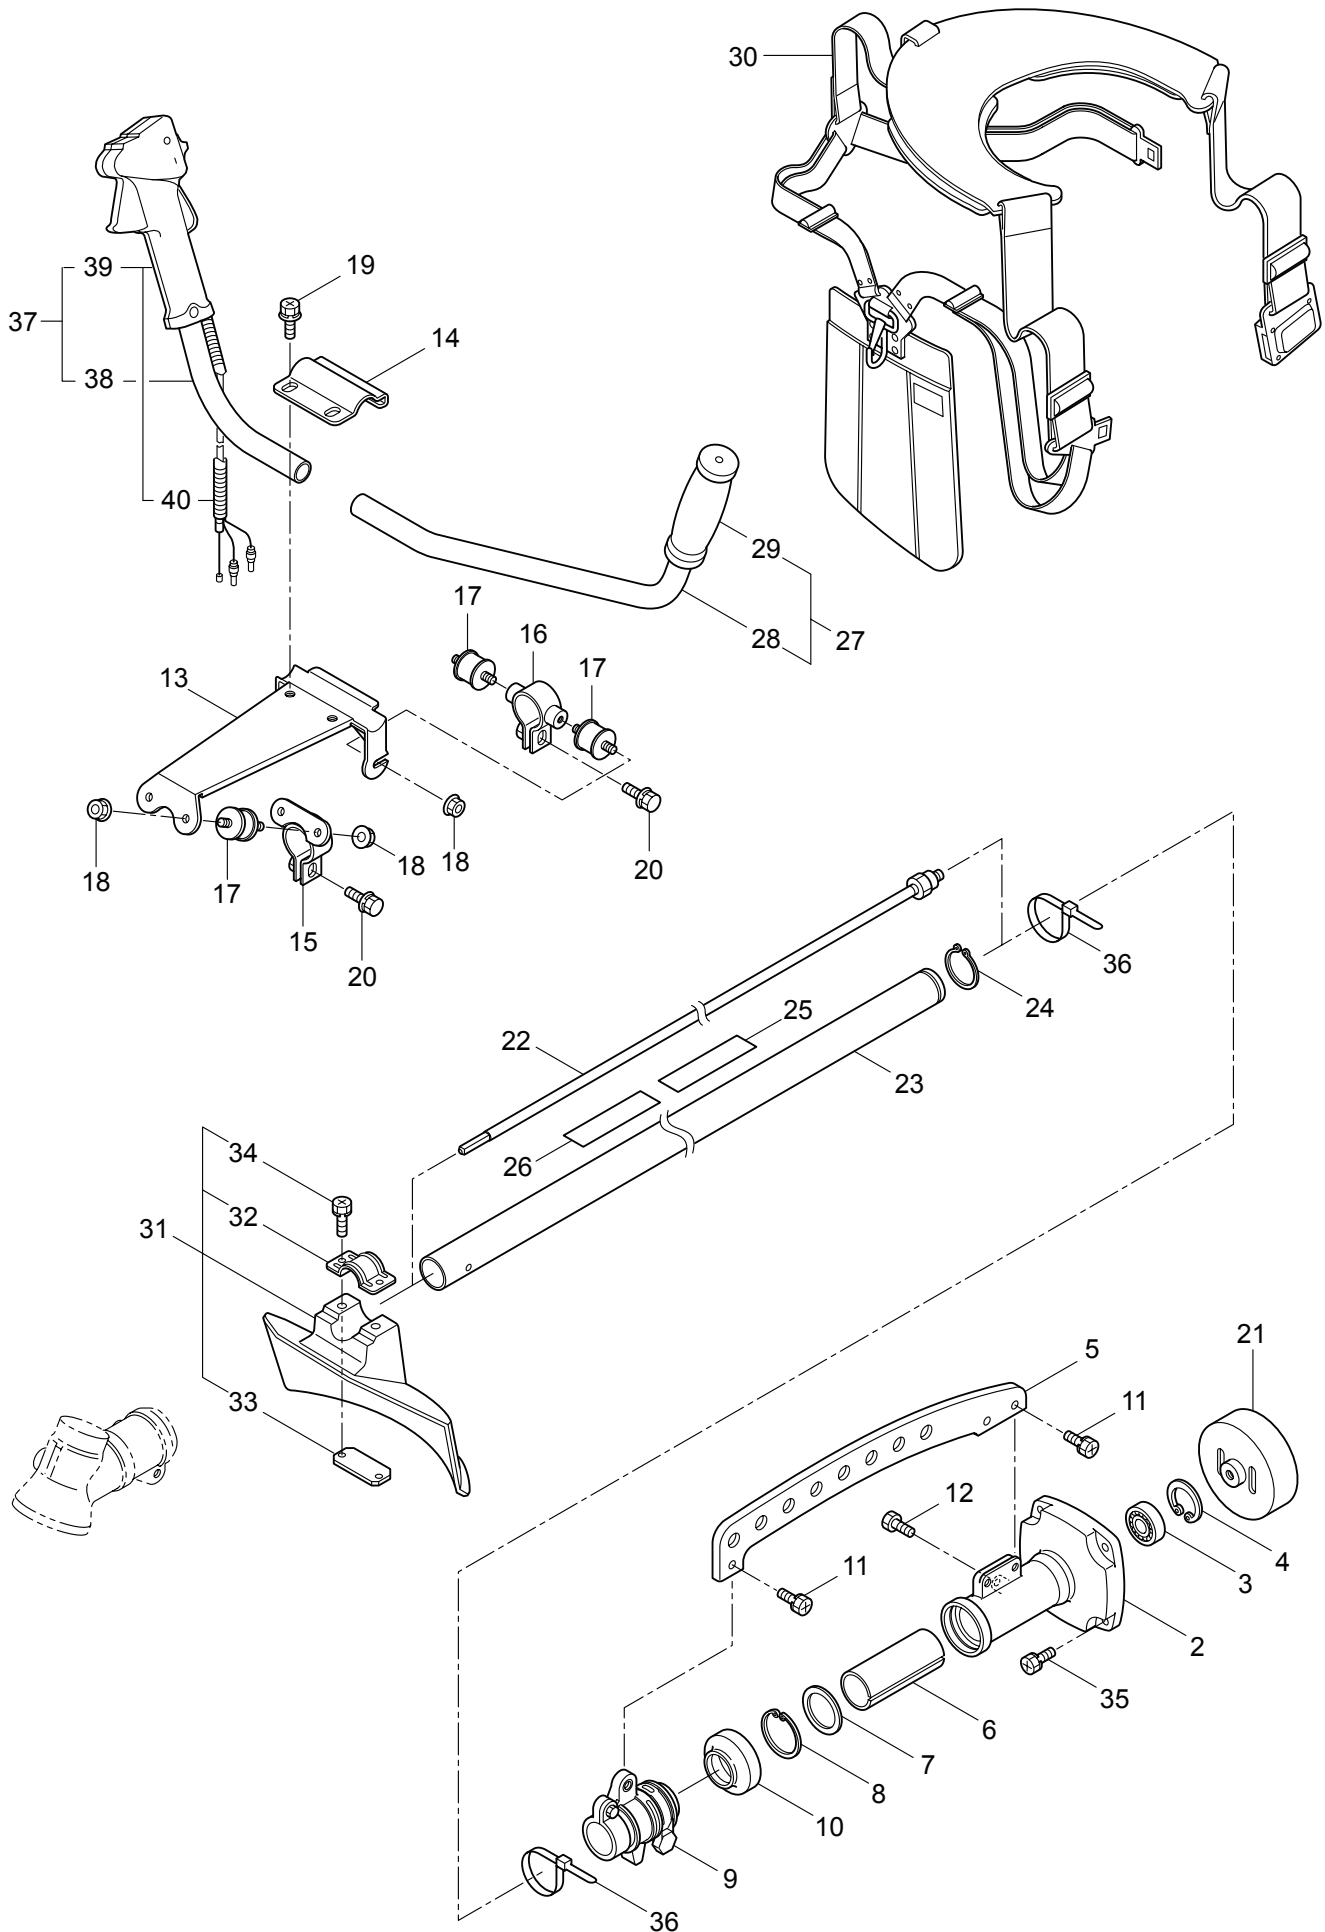


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	364071	BC4320i	1	
1-2	230695	Clutch Case	1	
1-3	140474	Bearing	1	#6202ZZ
1-4	012380	Snap Ring	1	#35
1-5	230689	Stay	1	
1-6	230699	Sleeve	1	32.4x28x80L
1-7	230697	Washer	1	40x30x2
1-8	012381	Snap Ring	1	#40
1-9	230693	Bracket Comp.	1	
1-10	230696	Dust Cover	1	
1-11	092551	Bolt	3	M6x15
1-12	089819	Bolt	1	M6x8
1-13	234236	Buffer Body	1	
1-14	234237	Plate	1	
1-15	234238	Pipe Band A Comp.	1	
1-16	234241	Pipe Band B Comp.	1	
1-17	054797	Buffer	4	
1-18	126756	Nut	6	M6
1-19	092587	Bolt	2	M8x25
1-20	126763	Bolt	2	M8x20(SM)
1-21	230704	Clutch Drum Comp.	1	78xM8
1-22	230703	Driveshaft	1	8x1572L
1-23	230701	Driveshaft Tube	1	28xT1.6x1520
1-24	230702	Snap Ring	1	#28
1-25	234222	Label	1	FUREKY BC4320i
1-26	213750	Label	1	Caution
1-27	234225	Handle Ass'y-Left	1	Incl.28,29
1-28	231815	Handle	1	
1-29	231817	Grip	1	
1-30	232001	Hanging Strap Ass'y	1	
1-31	234234	Safety Cover Ass'y	1	Incl.32-34
1-32	219874	Bracket	1	
1-33	210313	Threaded Bracket	1	
1-34	092555	Bolt	2	M6x30
1-35	092552	Bolt	4	M6x20
1-36	214022	Band	2	
1-37	234226	Handle Ass'y-Right	1	Incl.38-40
1-38	231816	Handle	1	
1-39	231818	Throttle Trigger	1	Incl.40
1-40	223862	Wire Ass'y	1	

2. BC4320i
GEARCASE

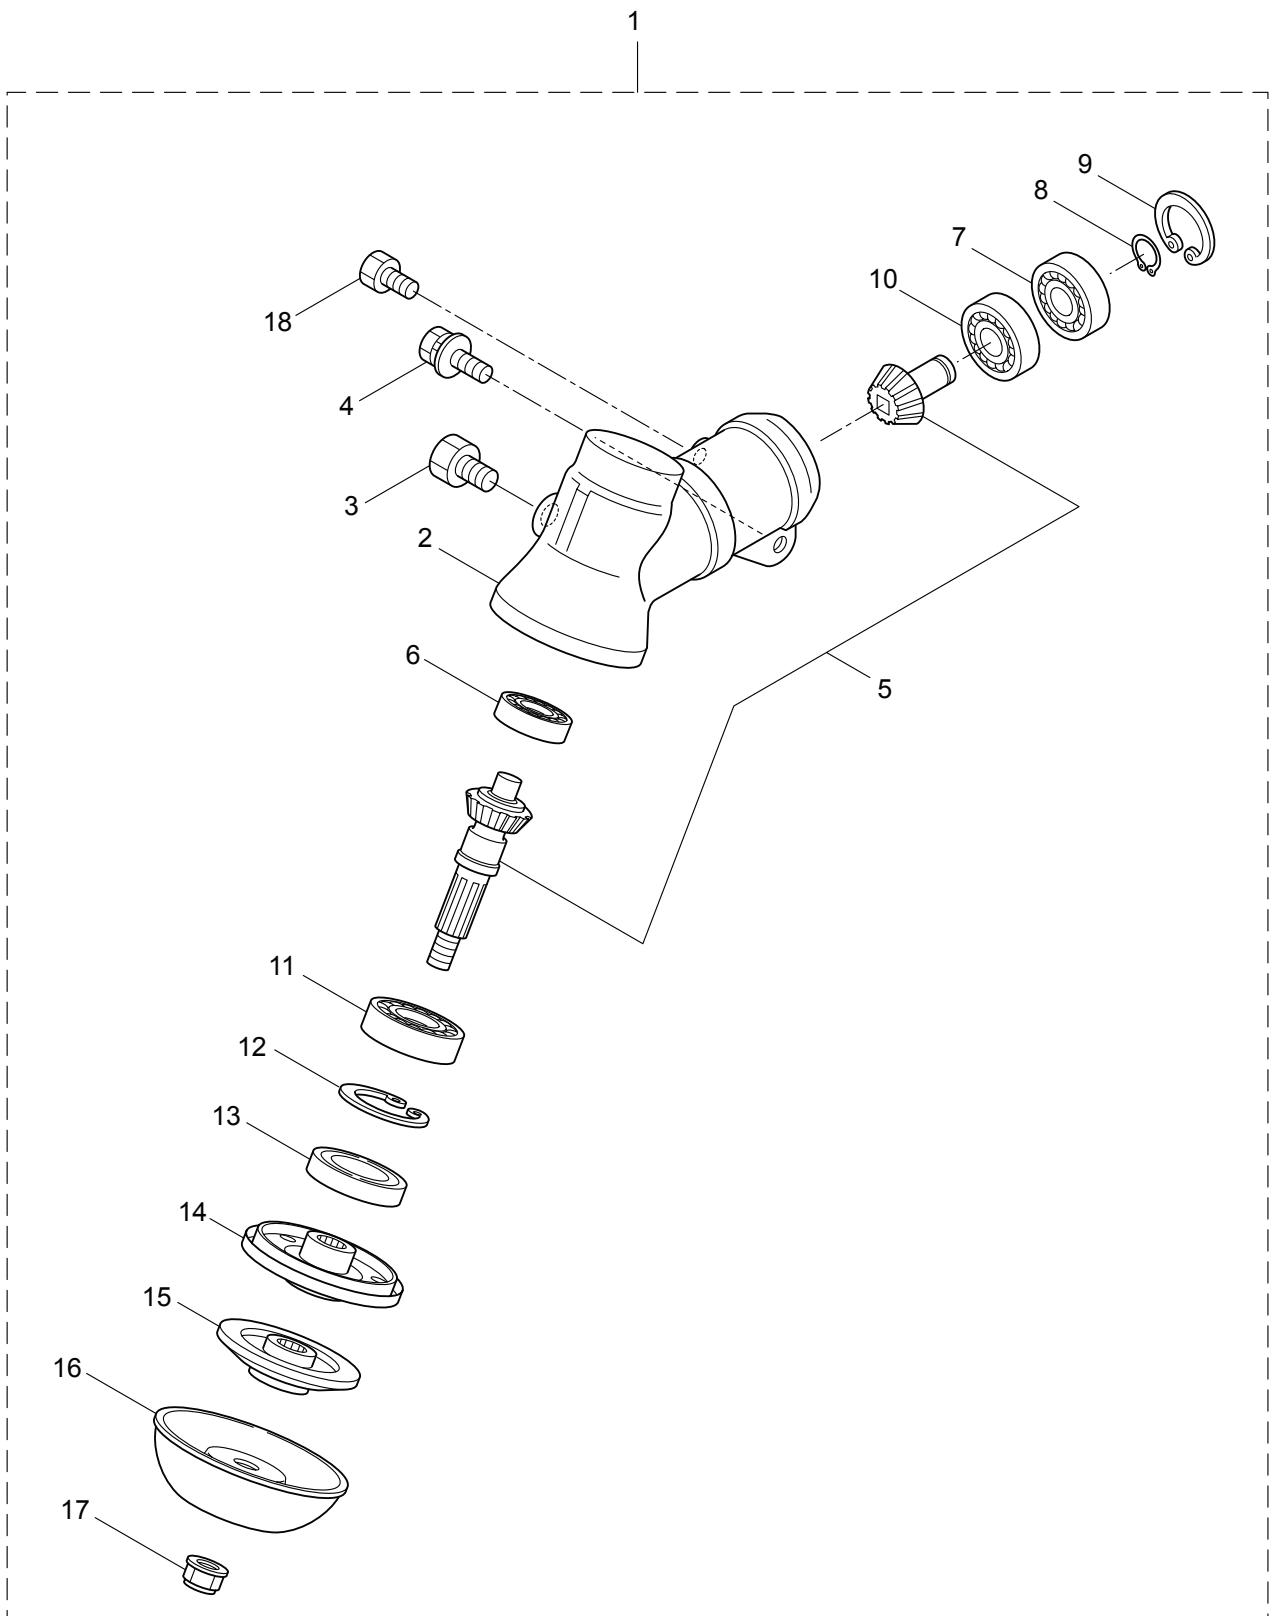


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	232919	Gearcase Ass'y	1	Incl.2-18
2-2	232833	Gearcase	1	
2-3	234109	Bolt	1	M8x8
2-4	092556	Bolt	1	M6x30
2-5	234349	Gear Set	1	
2-6	014490	Bearing	1	#6000
2-7	106933	Bearing	1	#6000Z
2-8	014210	Snap Ring	1	#10
2-9	054676	Snap Ring	1	#26
2-10	014490	Bearing	1	#6000
2-11	012544	Bearing	1	#6202
2-12	012380	Snap Ring	1	#35
2-13	232049	Oil Seal	1	D21355
2-14	232322	Bracket A Ass'y	1	
2-15	232052	Bracket B	1	
2-16	230849	Stabilizer	1	
2-17	232920	Nut	1	M10x1.25
2-18	089747	Bolt	1	M6x12

3. BC4320i
ENGINE

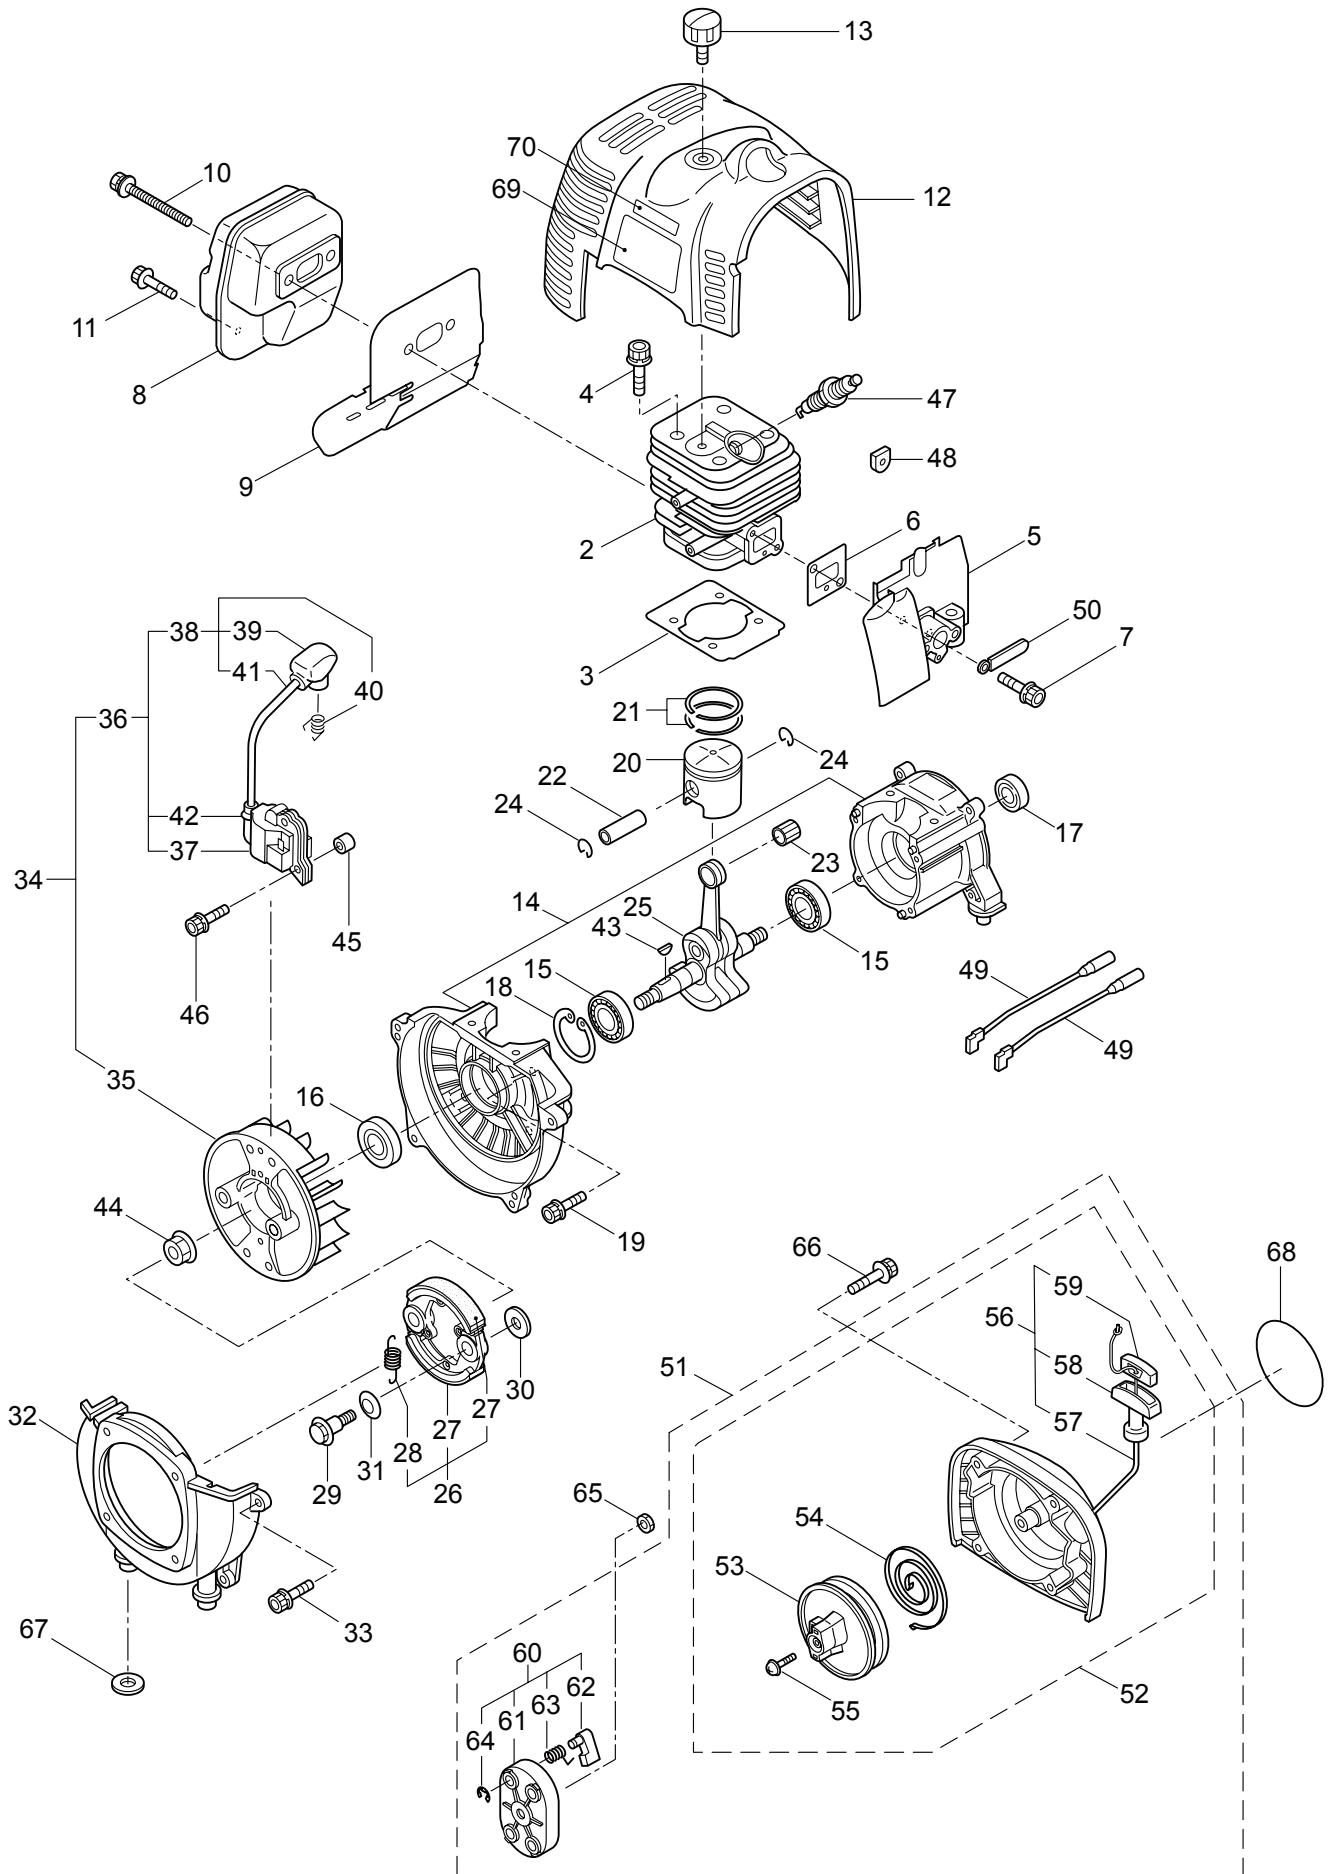


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	859120	Engine	1	NE420/37
3-2	282257	Cylinder	1	New gasket required
3-3	282259	Gasket	1	
3-4	261612	Cap Screw	4	M5x30
3-5	282261	Insulator	1	New gasket required
3-6	286715	Gasket	1	
3-7	267290	Cap Screw	2	M5x20
3-8	282264	Muffler Comp.	1	
3-9	282271	Gasket	1	
3-10	266713	Cap Screw	2	M5x60
3-11	283315	Screw	1	M5x12W-12
3-12	289468	Top Cover	1	
3-13	262556	Knob	1	
3-14	282277	Crankcase	1	
3-15	262658	Bearing	2	#6202C3
3-16	262660	Oil Seal	1	TC15357
3-17	262565	Oil Seal	1	ISCD15257
3-18	012380	Snap Ring	1	#35
3-19	261612	Cap Screw	4	M5x30
3-20	265227	Piston	1	
3-21	262476	Piston Ring	2	(2)Required
3-22	262749	Piston Pin	1	
3-23	262659	Bearing, Needle	1	KTV111414EG01B2
3-24	262479	Clip, Piston Pin	2	
3-25	283038	Crankshaft/Conn.Rod Ass'y	1	
3-26	286905	Clutch Ass'y	1	Incl.27,28
3-27	286906	Clutch Shoe	2	(2)Required
3-28	286907	Spring, Clutch	1	
3-29	287091	Cap Screw	2	M8x1.25
3-30	262683	Washer	2	8x22x1.2
3-31	262682	Wave Washer	2	
3-32	282285	Fan Cover	1	
3-33	261250	Cap Screw	4	M5x20
3-34	282287	Magneto Ass'y	1	Incl.35-42
3-35	282288	Rotor/Fan	1	
3-36	282289	Ignition Coil Ass'y	1	Incl.37-42
3-37	267572	Coil	1	
3-38	282290	Spark Plug Wire Ass'y	1	Incl.39-41
3-39	282292	Plug Boot	1	
3-40	261075	Connector	1	
3-41	282291	Spark Plug Wire	1	
3-42	261072	Cap	1	
3-43	261076	Woodruff Key	1	3x10
3-44	262731	Nut, Rotor	1	M10
3-45	280381	Spacer	2	

3. BC4320i
ENGINE

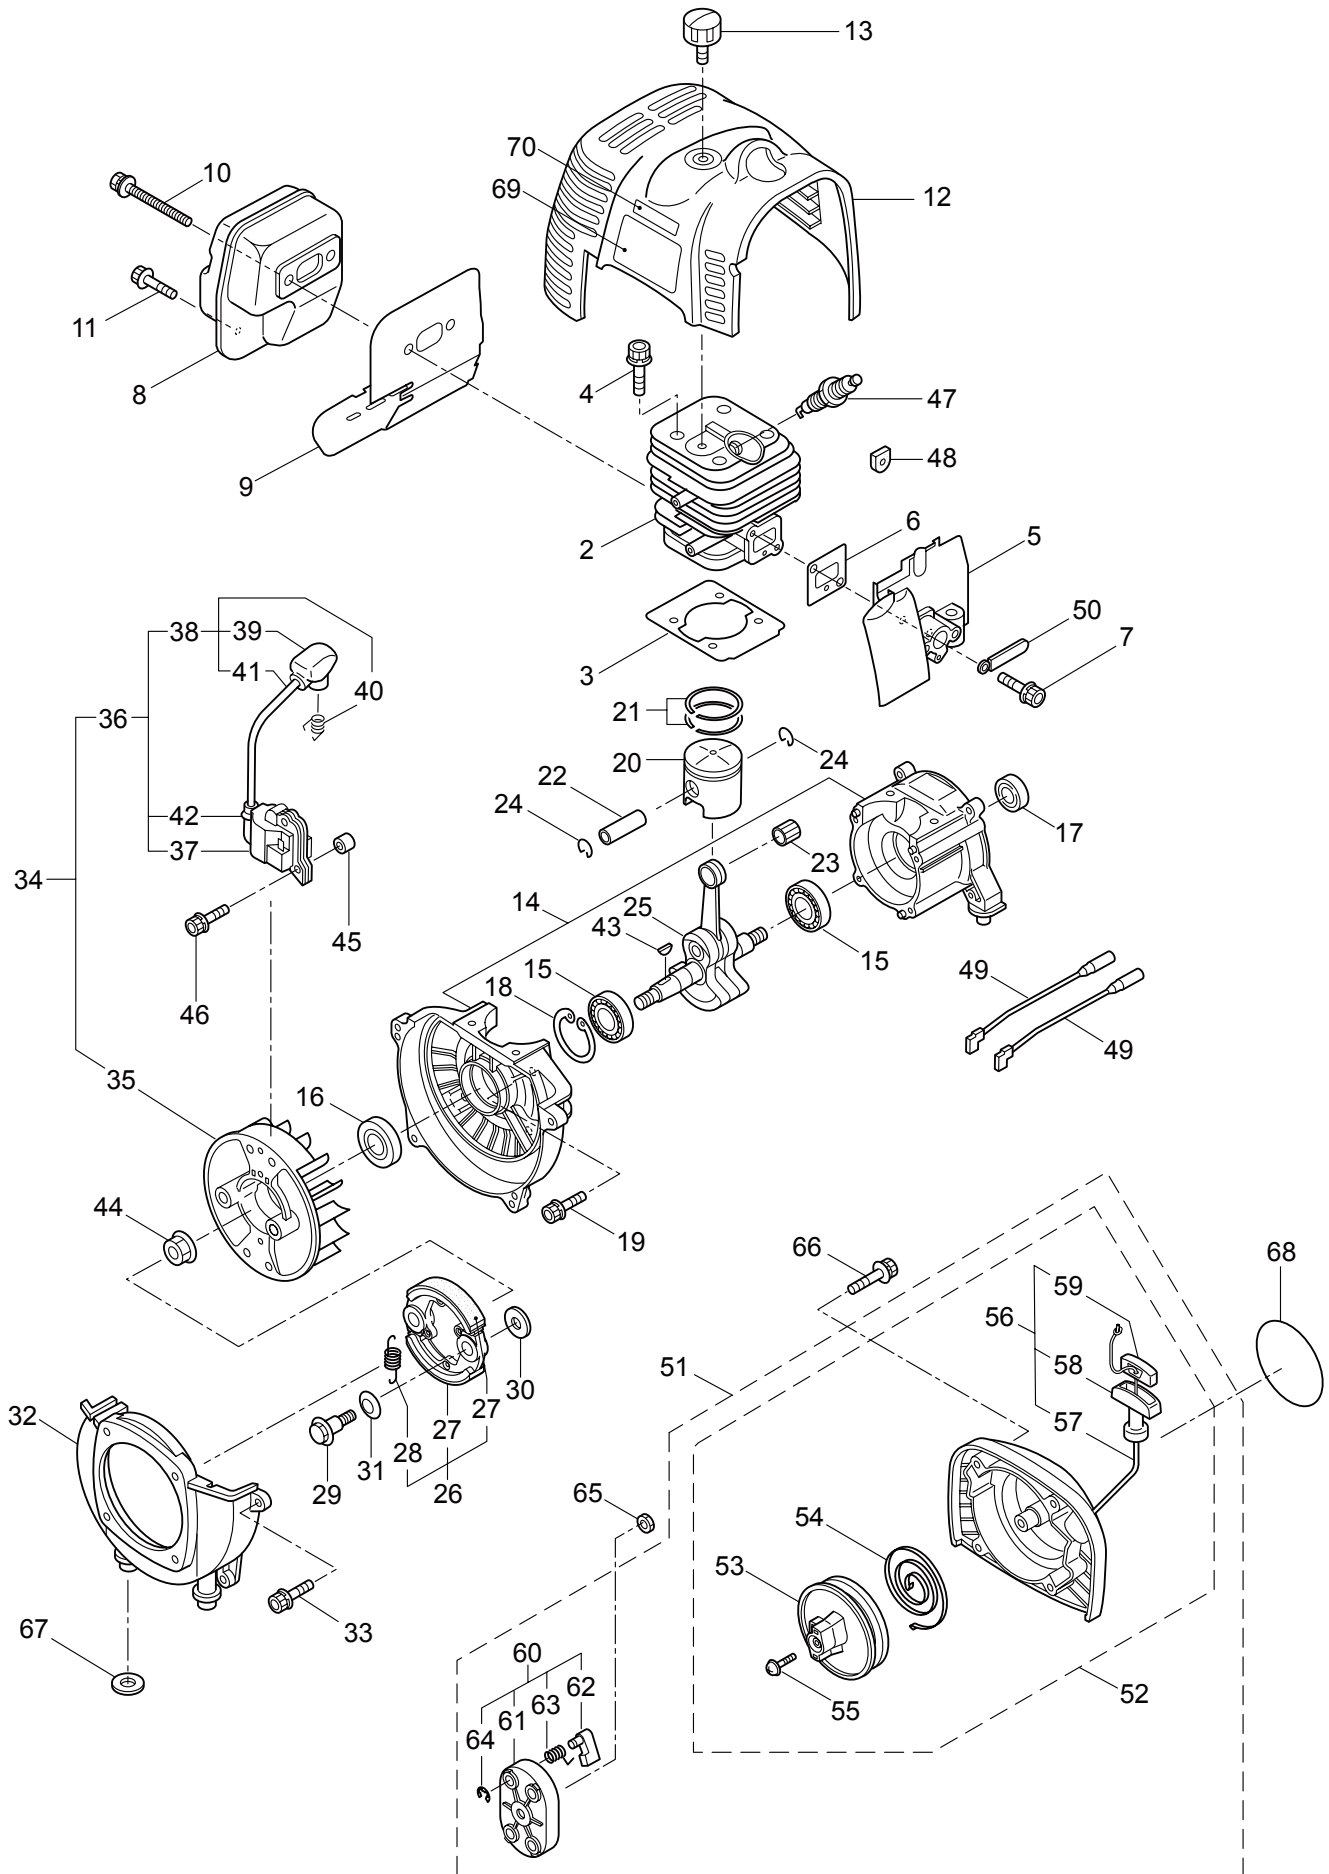


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-46	261256	Cap Screw	2	M4x25
3-47	261200	Spark Plug	1	NGK BPM6Y
3-48	281172	Grommet	1	
3-49	267492	Lead	2	130L
3-50	264588	Clamp	1	
3-51	285674	Recoil Starter Ass'y	1	Incl.52-64
3-52	285675	Starter Ass'y	1	Incl.53-59
3-53	285676	Reel	1	
3-54	280995	Spiral Spring	1	
3-55	281000	Set Screw	1	
3-56	285677	Starter Rope Ass'y	1	Incl.57-59
3-57	285678	Starter Rope	1	
3-58	262633	Starter Grip	1	
3-59	262981	Cap	1	
3-60	285679	Starter Pulley Ass'y	1	Incl.61-64
3-61	285680	Starter Pulley	1	
3-62	285681	Pawl	2	
3-63	285682	Return Spring	2	
3-64	262638	E-Ring	2	
3-65	285736	Nut	1	M8
3-66	261607	Cap Screw	4	M5x16
3-67	285735	Packing	4	
3-68	289470	Label	1	
3-69	289471	Label	1	
3-70	289474	Label	1	

4. BC4320i
 CARBURETOR, FUEL TANK

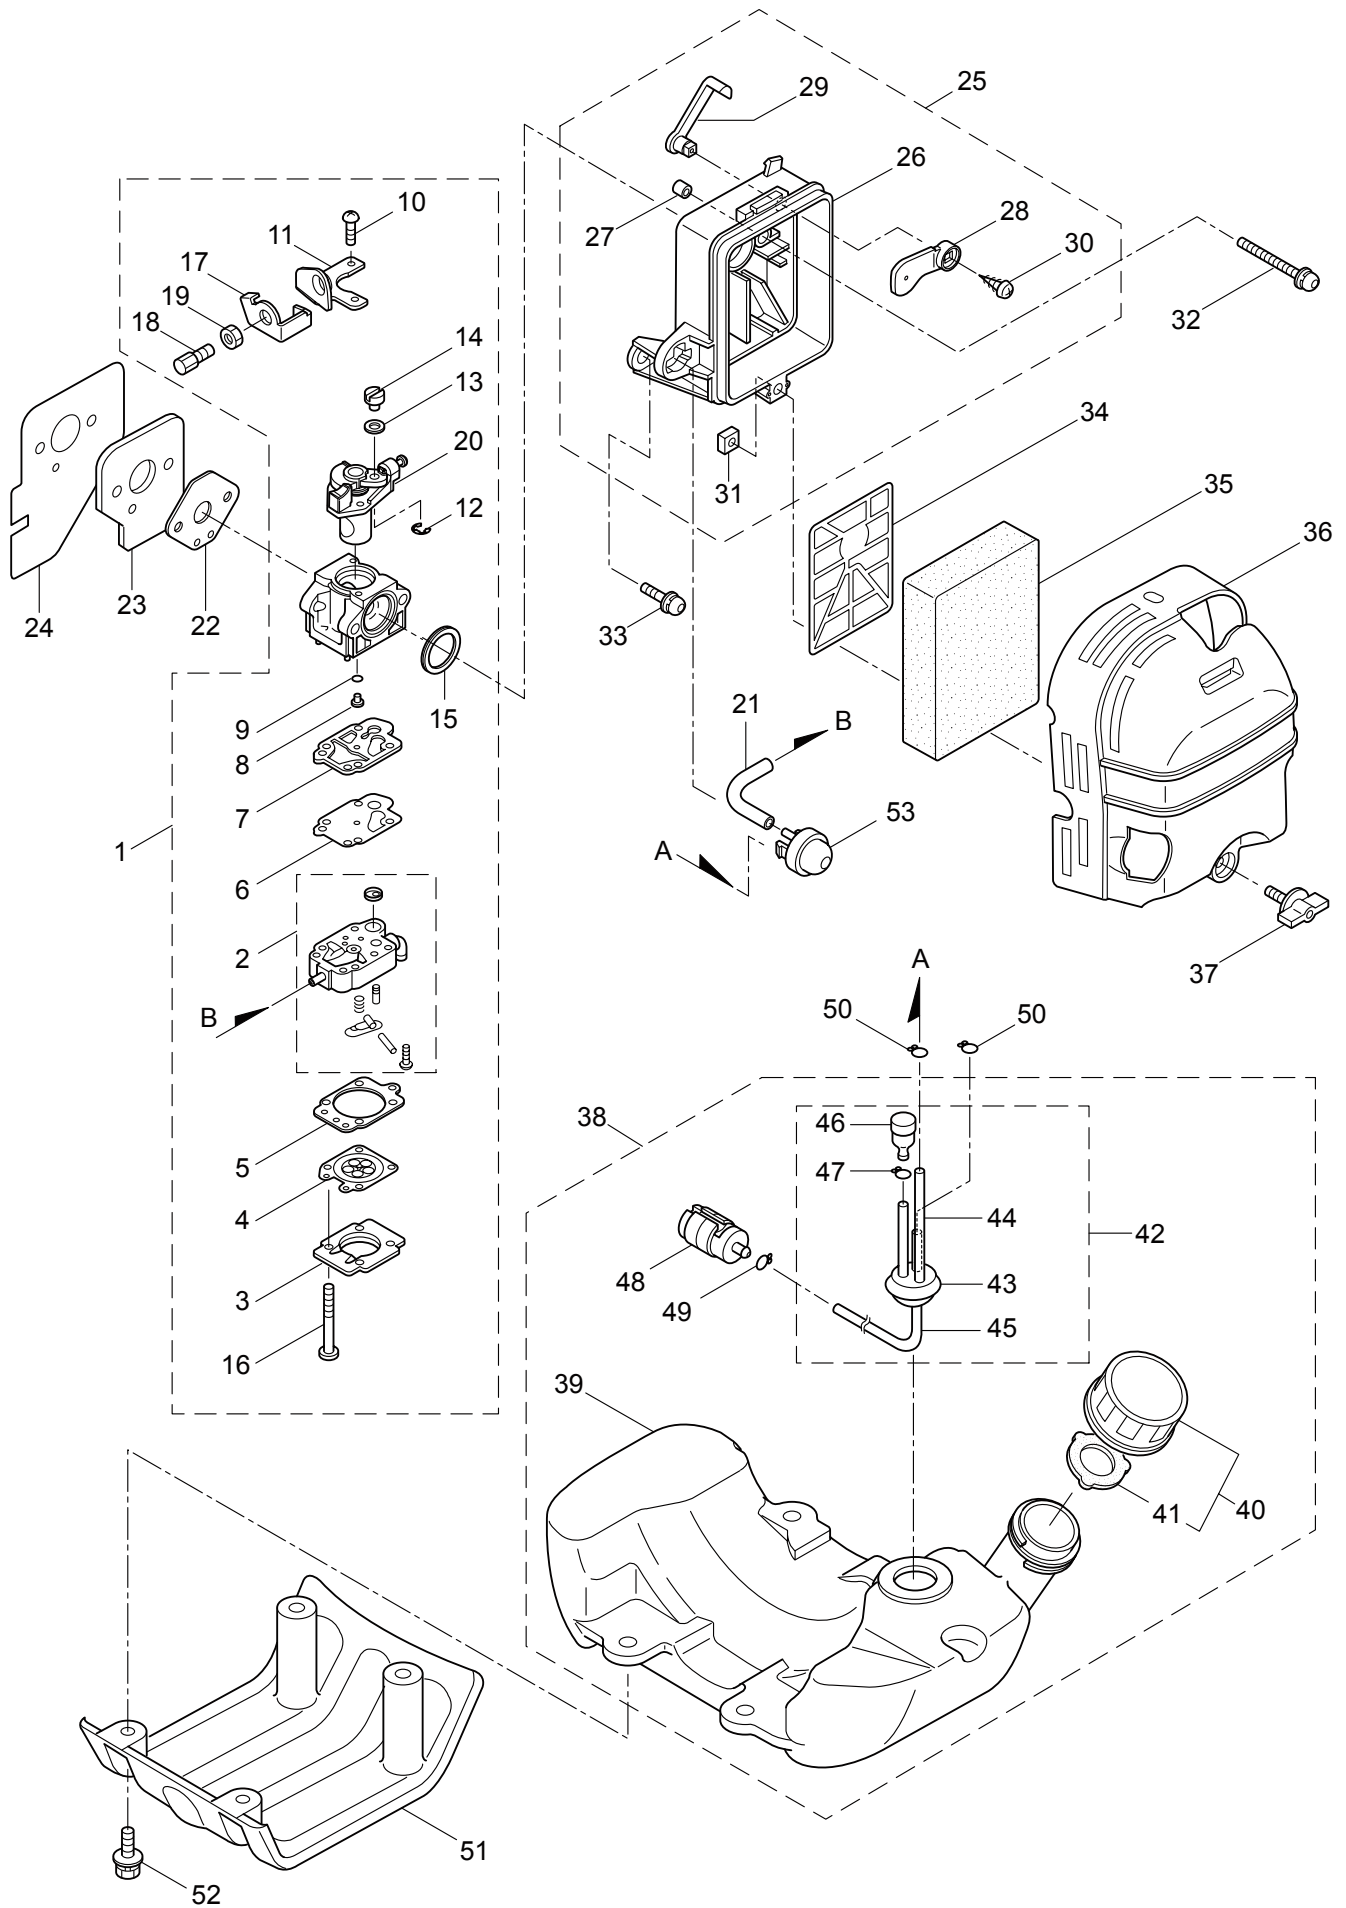







Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	287137	Carburetor Ass'y	1	Incl.2-20 New gasket required
4-2	283124	Pump Body	1	
4-3	263726	Cover Plate	1	
4-4	283905	Diaphragm, Meterring	1	
4-5	263727	Gasket	1	
4-6	262994	Diaphragm,Fuel Pump	1	
4-7	282576	Gasket	1	
4-8	284875	Main Jet	1	
4-9	261871	O-Ring	1	
4-10	261875	Screw	2	
4-11	264677	Bracket	1	
4-12	261876	E-Ring	1	
4-13	264678	Washer	1	
4-14	261658	Swivel	1	
4-15	261657	Packing	1	
4-16	263737	Screw	4	
4-17	283935	Plate	1	
4-18	265409	Adapter	1	
4-19	283936	Nut	1	M6
4-20	287728	Throttle Valve	1	
4-21	282512	Fuel Pipe	1	
4-22	282301	Gasket	1	
4-23	283086	Divider	1	
4-24	283087	Gasket	1	
4-25	282302	Case Ass'y	1	Incl.26-31
4-26	282303	Case Body	1	
4-27	282484	Sleeve	3	
4-28	282304	Valve	1	
4-29	282305	Lever	1	
4-30	269032	Screw	1	
4-31	269423	Nut	1	
4-32	262720	Cap Screw	2	M5x55
4-33	264807	Cap Screw	1	M5x16
4-34	282481	Plate	1	
4-35	282306	Element	1	
4-36	285163	Cleaner Cover	1	
4-37	281438	Knob	1	
4-38	283487	Fuel Tank Ass'y	1	Incl.39-49
4-39	282310	Fuel Tank	1	
4-40	281565	Fuel Tank Cap Ass'y	1	Incl.41
4-41	269377	Gasket	1	
4-42	282312	Fuel Pipe Ass'y	1	Incl.43-47
4-43	268065	Grommet	1	
4-44	282511	Return Pipe	1	
4-45	262649	Fuel Pipe	1	

4. BC4320i
 CARBURETOR, FUEL TANK

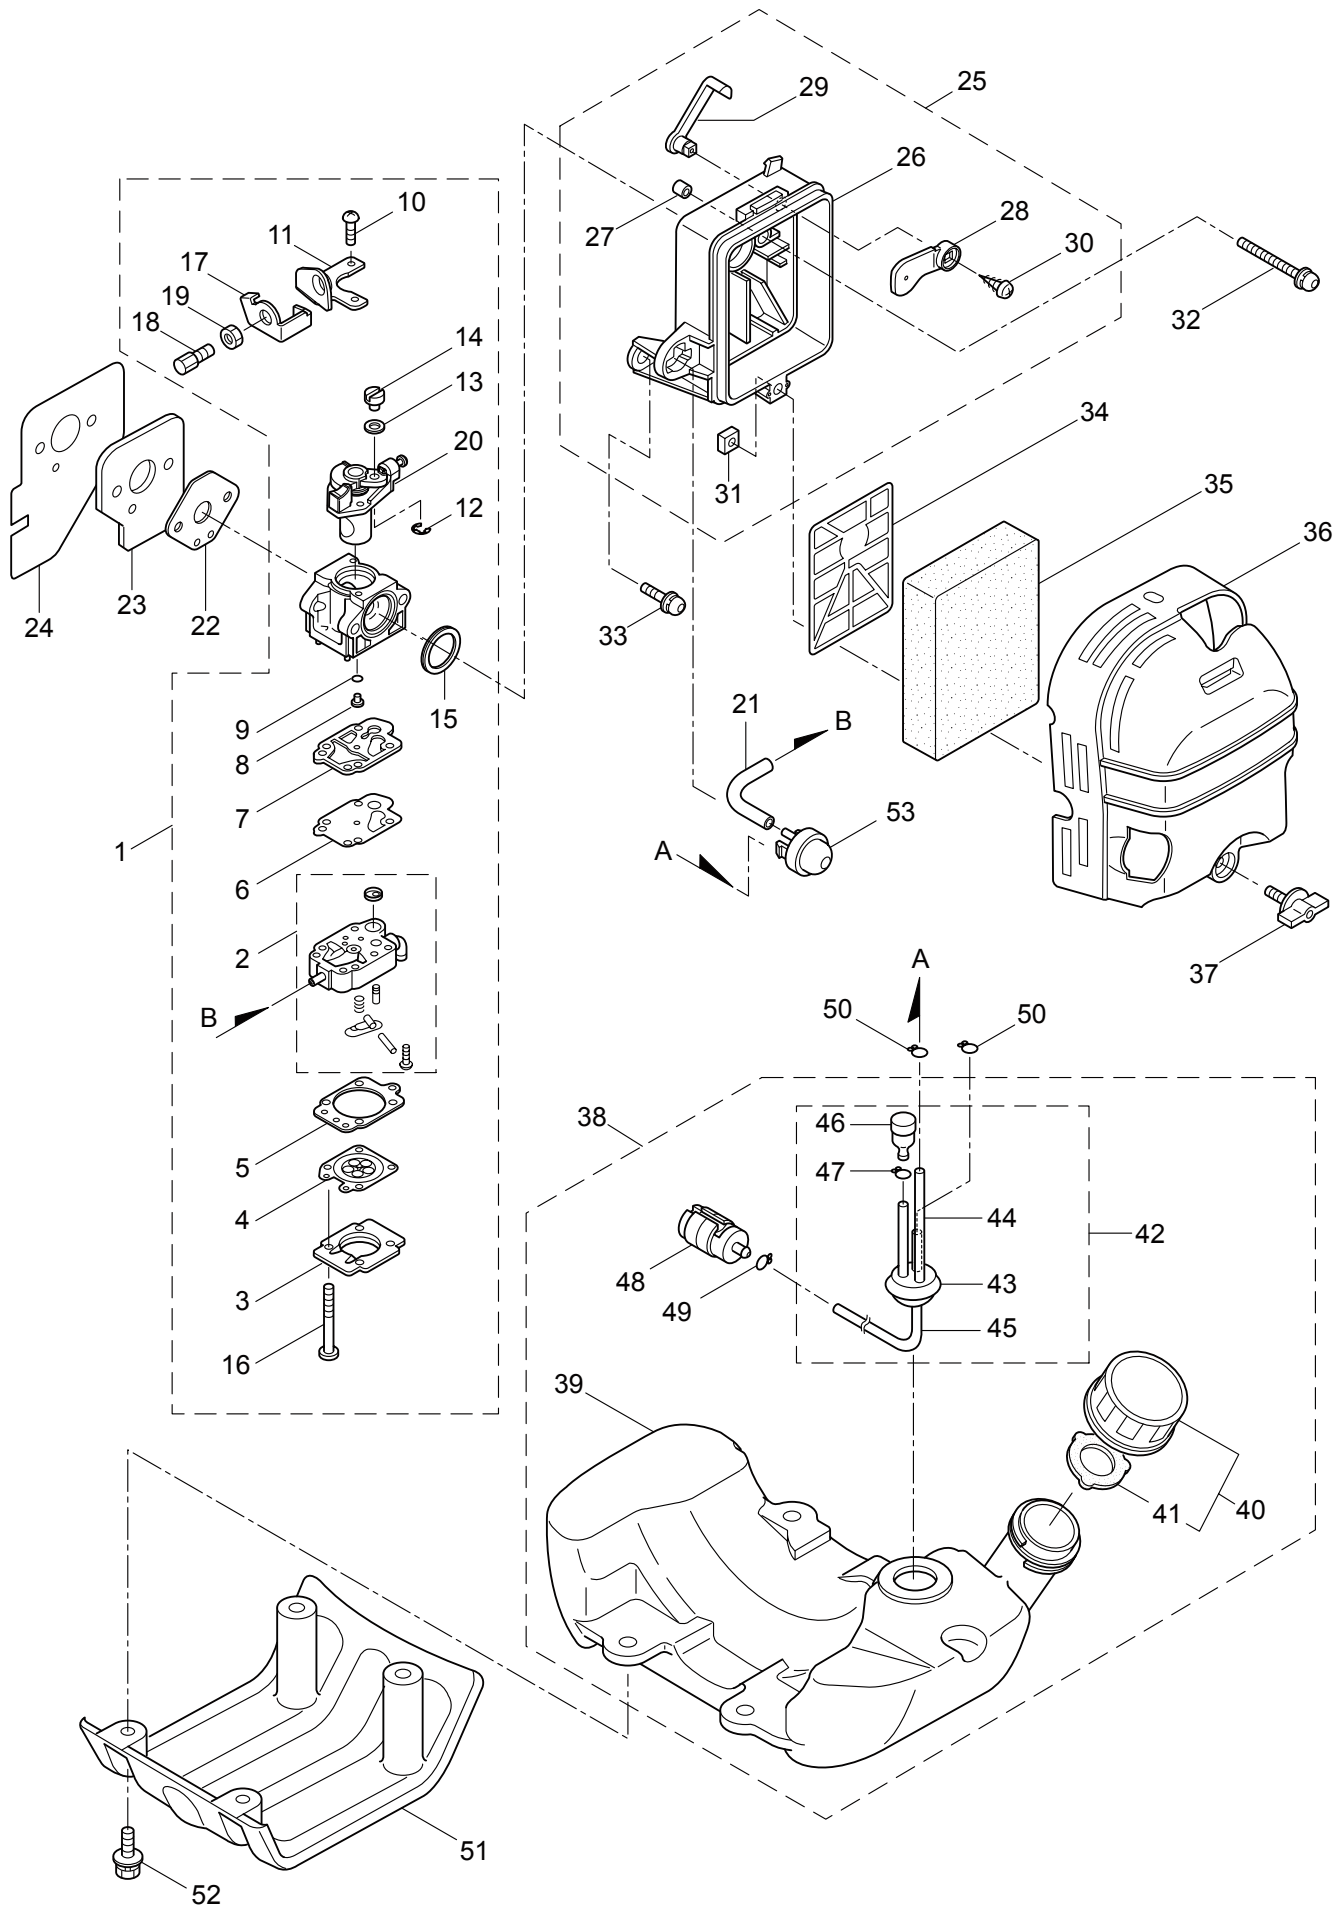

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-46	261590	Breather	1	
4-47	261117	Clip	1	
4-48	267328	Fuel Filter Ass'y	1	
4-49	261117	Clip	1	
4-50	261117	Clip	2	
4-51	285167	Stand	1	
4-52	281714	Cap Screw	4	M5x20
4-53	282299	Pump	1	

5. BC4320i
ACCESSORIES

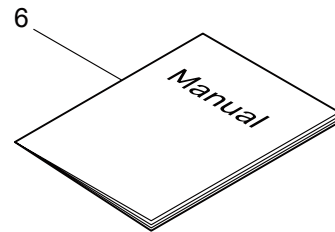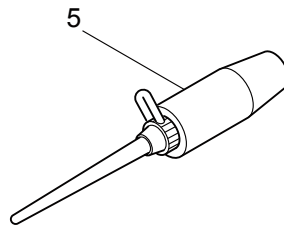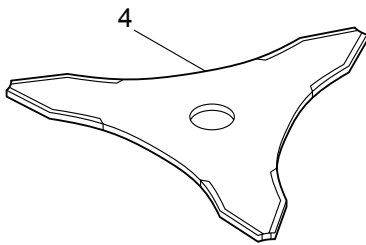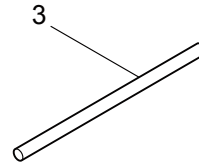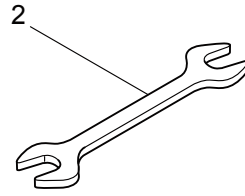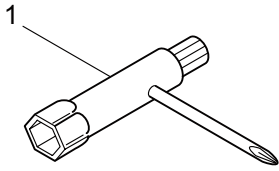

Ref. No.	Part No.	Part Name	Q'ty	Remarks
5-1	228008	Box Spanner	1	
5-2	054756	Double-ended Wrench	1	10x13
5-3	212300	Lever Handle	1	6X100L
5-4	227910	3-Teeth Blade	1	
5-5	211337	Grease Tube	1	
5-6	234224	Instruction Manual	1	BC4320i GB/ES